3K POS

SETTINGS

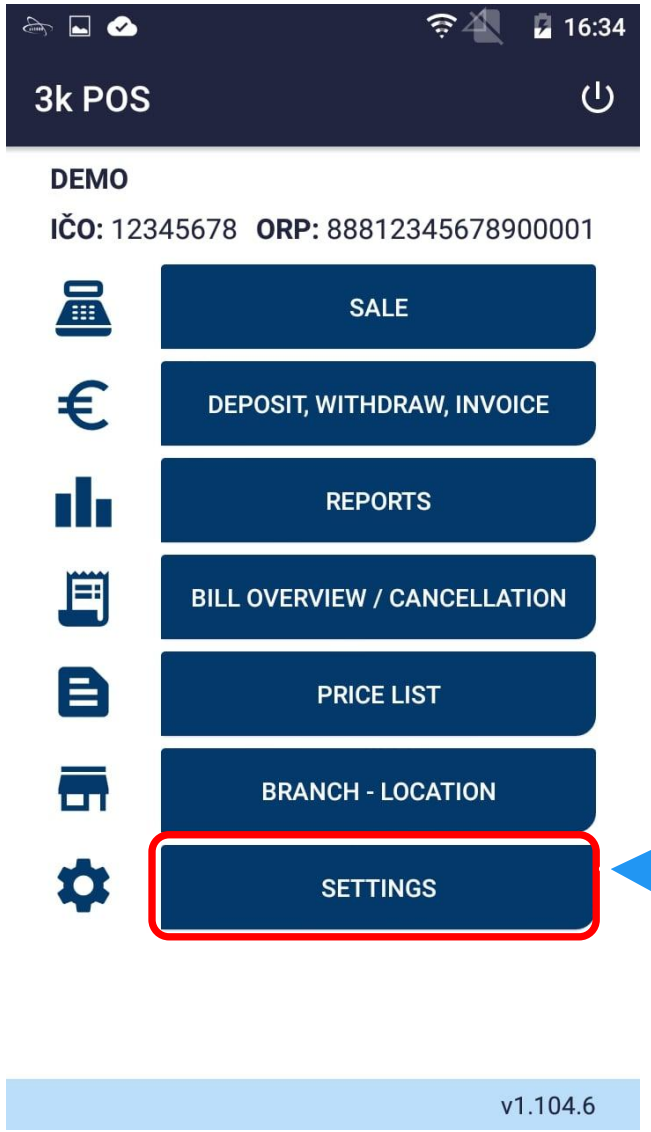

Click „Settings“

Click „POS“

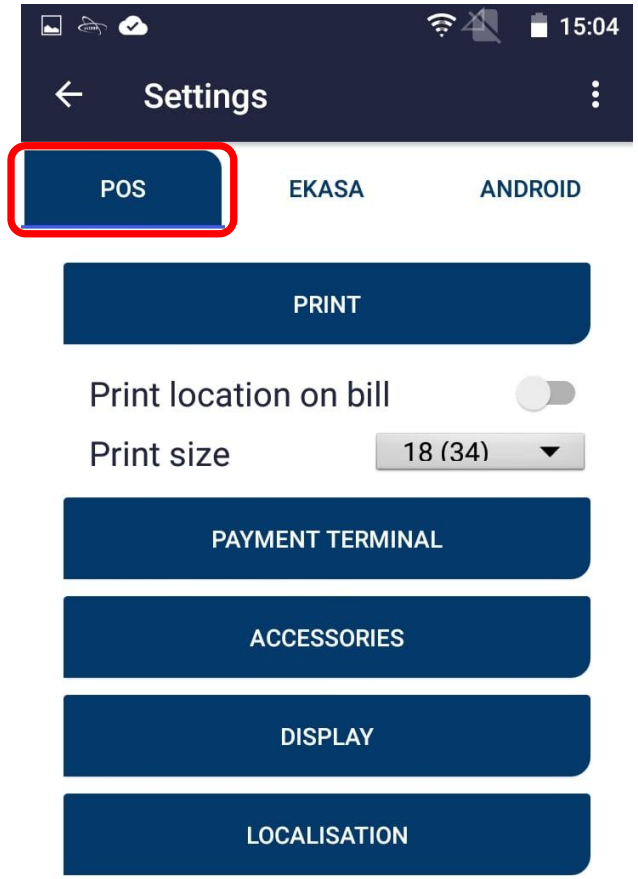
15:04
Settings
POS
EKASA
ANDROID
PRINT
Print location on bill
Print size
18 (34)
PAYMENT TERMINAL
ACCESSORIES
DISPLAY
LOCALISATION

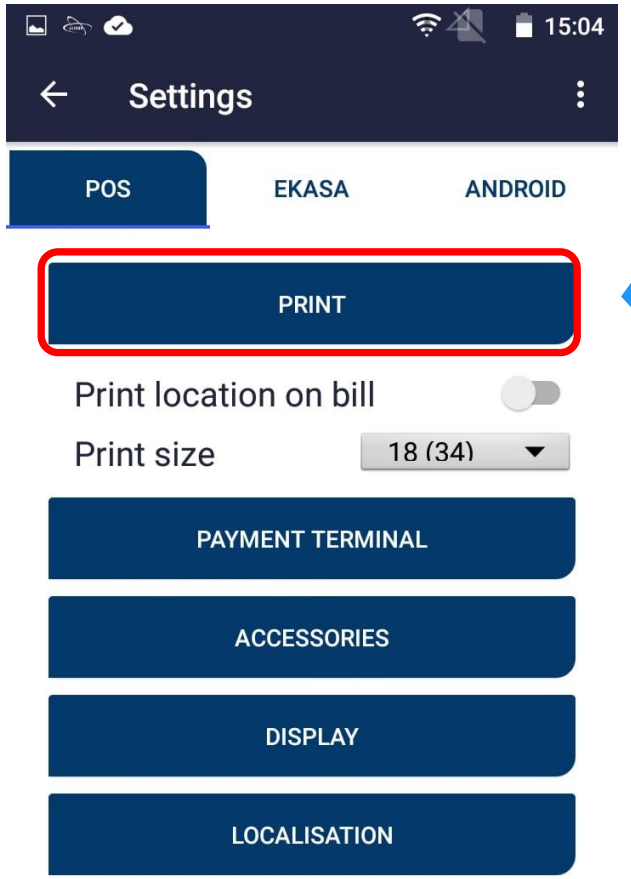
15:04
Settings
POS
EKASA
ANDROID
PRINT
Print location on bill
Print size
18 (34)
PAYMENT TERMINAL
ACCESSORIES
DISPLAY
LOCALISATION

Click „Print“

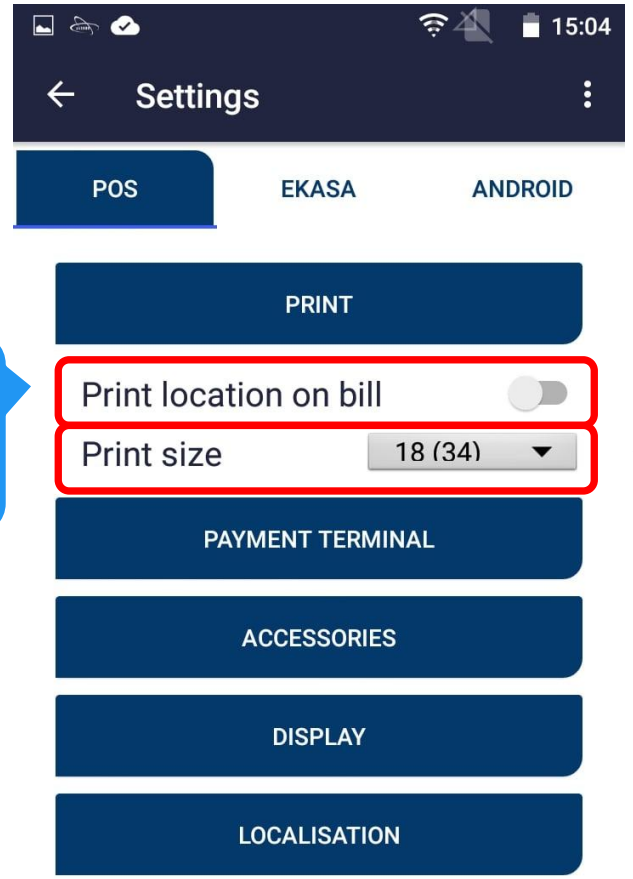

Allow location printing on bill

Print size setting

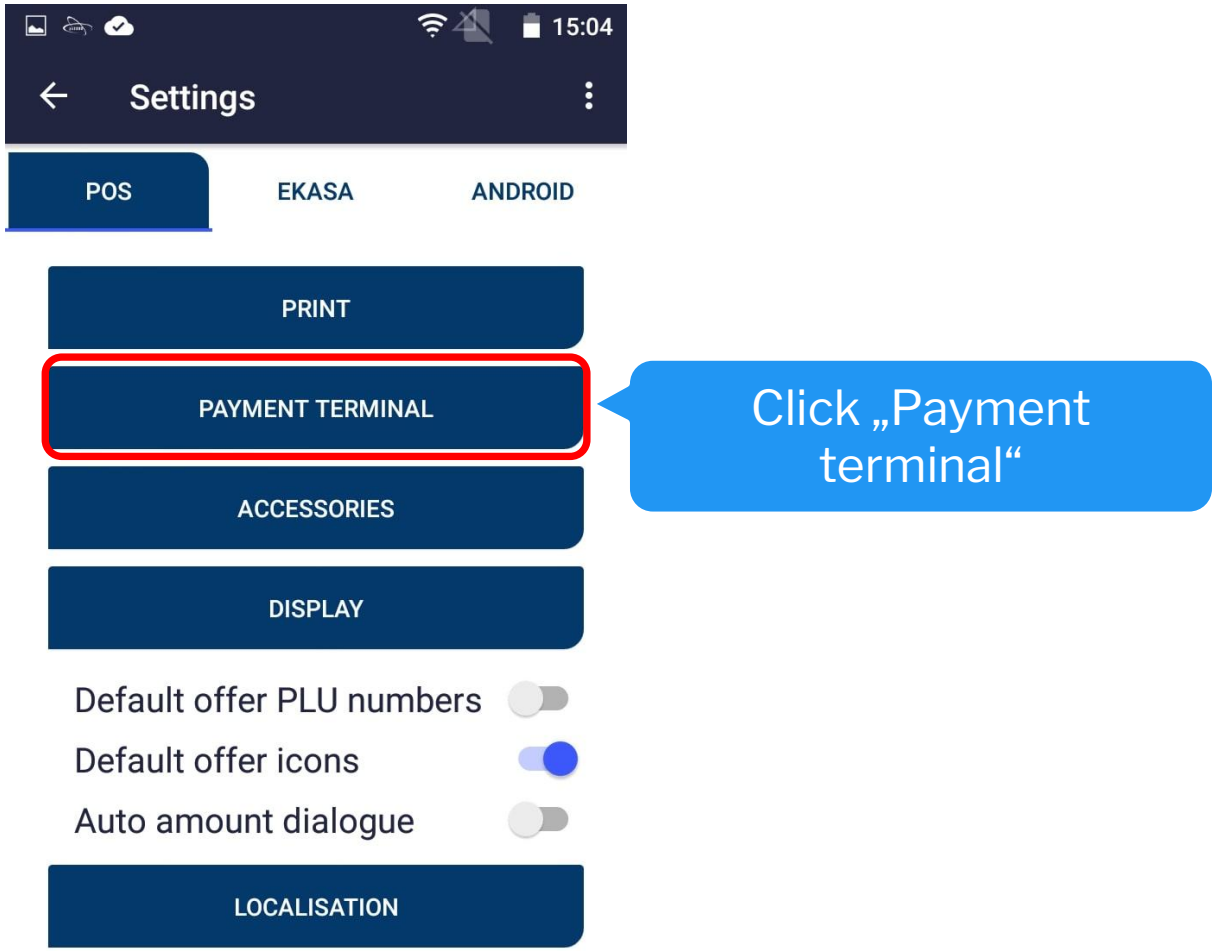
15:04
Settings
POS
EKASA
ANDROID
PRINT
PAYMENT TERMINAL
ACCESSORIES
DISPLAY
Default offer PLU numbers
Default offer icons
Auto amount dialogue
LOCALISATION
Click „Payment terminal“

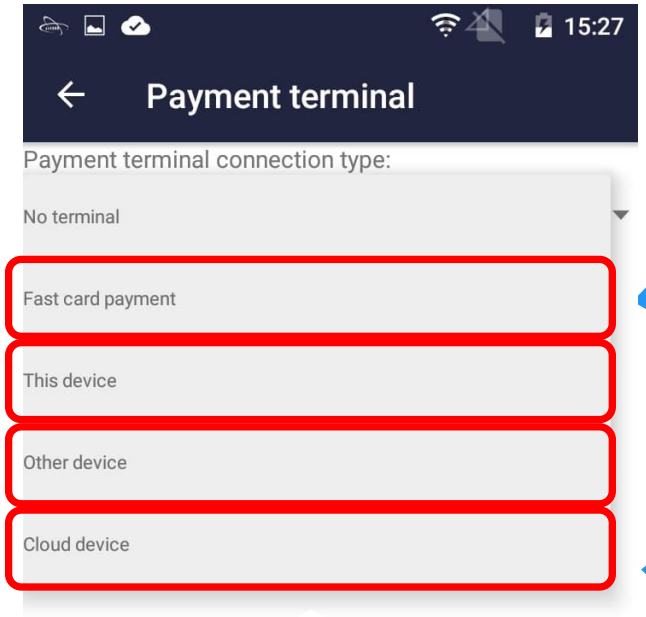

Choosing „Fast card payment“ will register the payment as a card payment. The actual transaction has to be made on a different terminal

Choosing „This device“ will use internal payment app

Choosing „Other device“ will set external device as your payment terminal

Choosing „Cloud device“ will set a cloud device as your external payment terminal

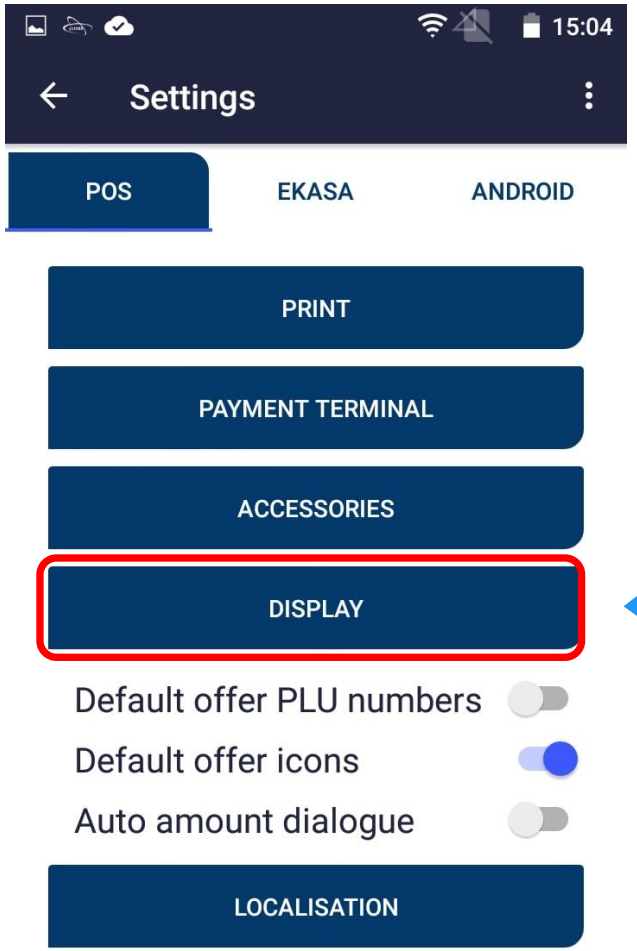

Click „Display“

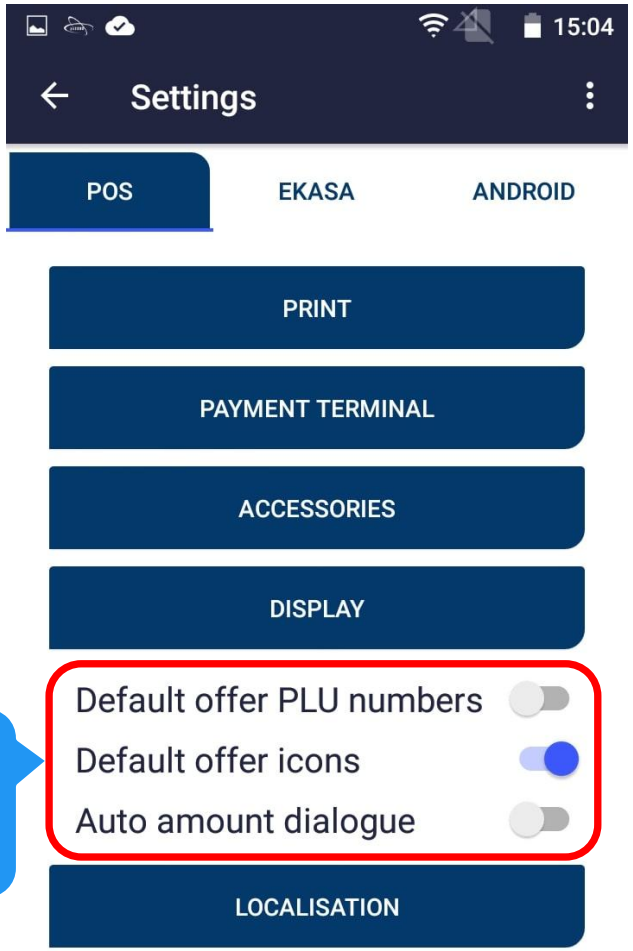

Choose display option

Click „EKASA“

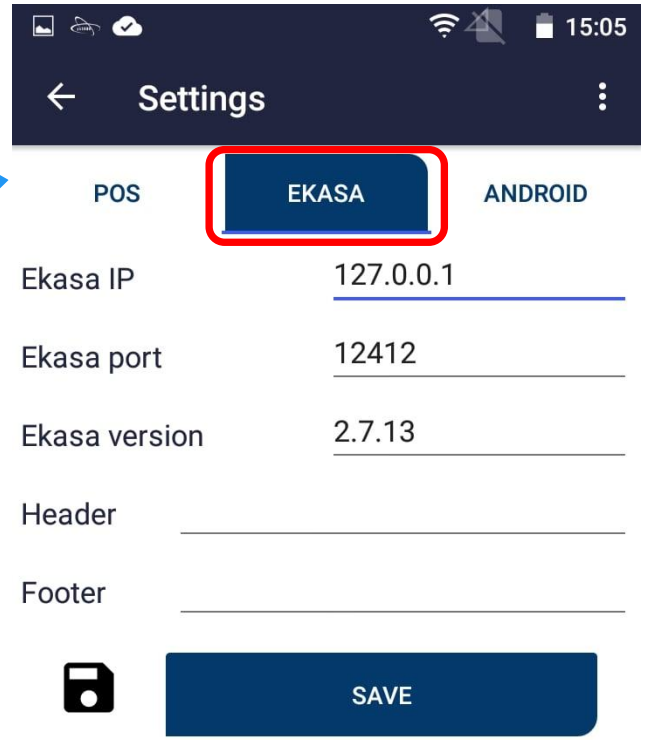
15:05
Settings
POS
EKASA
ANDROID
Ekasa IP
127.0.0.1
Ekasa port
12412
Ekasa version
2.7.13
Header
Footer
SAVE

Here you can set Ekasa IP and Ekasa port

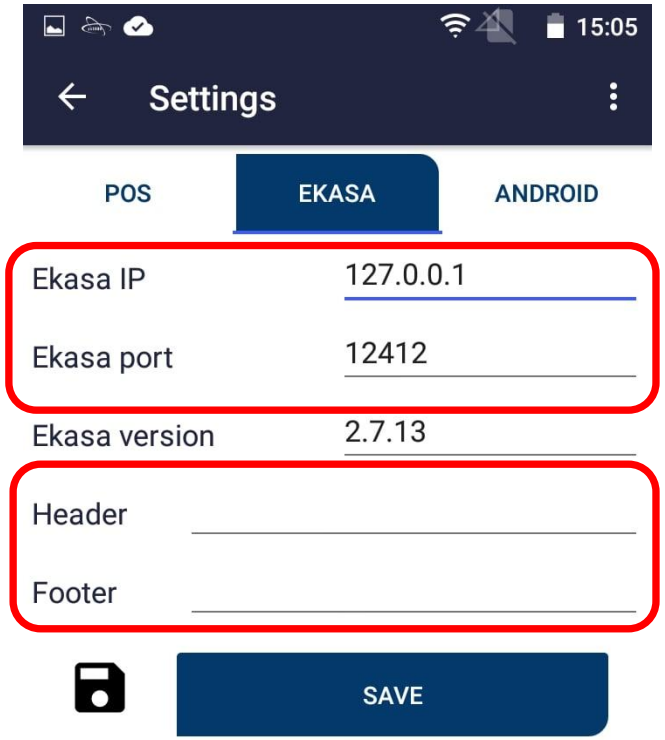

Here you can set header and footer for the receipt

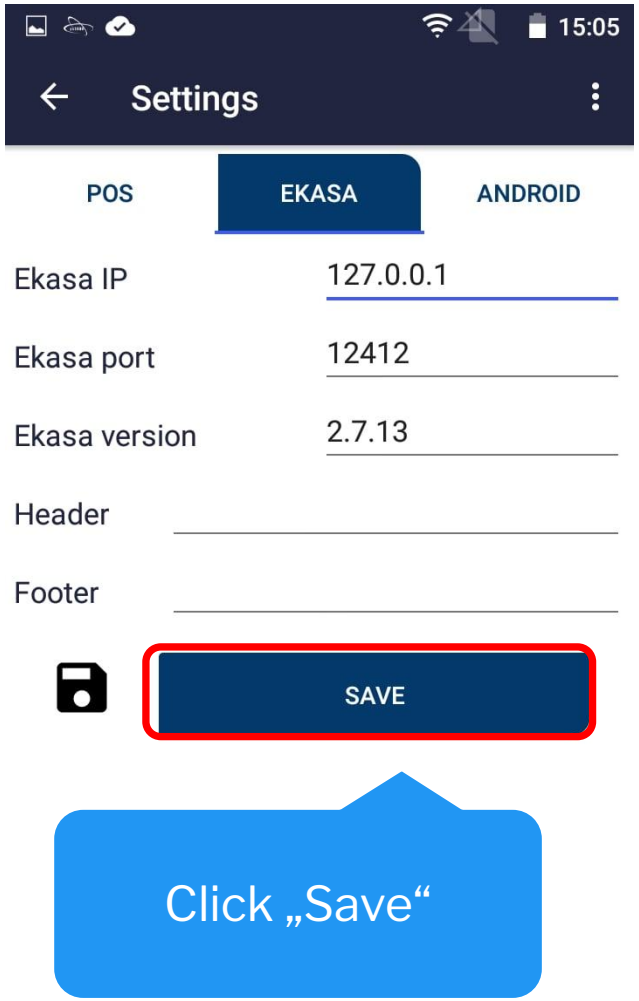
15:05
Settings
POS
EKASA
ANDROID
Ekasa IP
127.0.0.1
Ekasa port
12412
Ekasa version
2.7.13
Header
Footer
SAVE
Click „Save“

PRICELIST

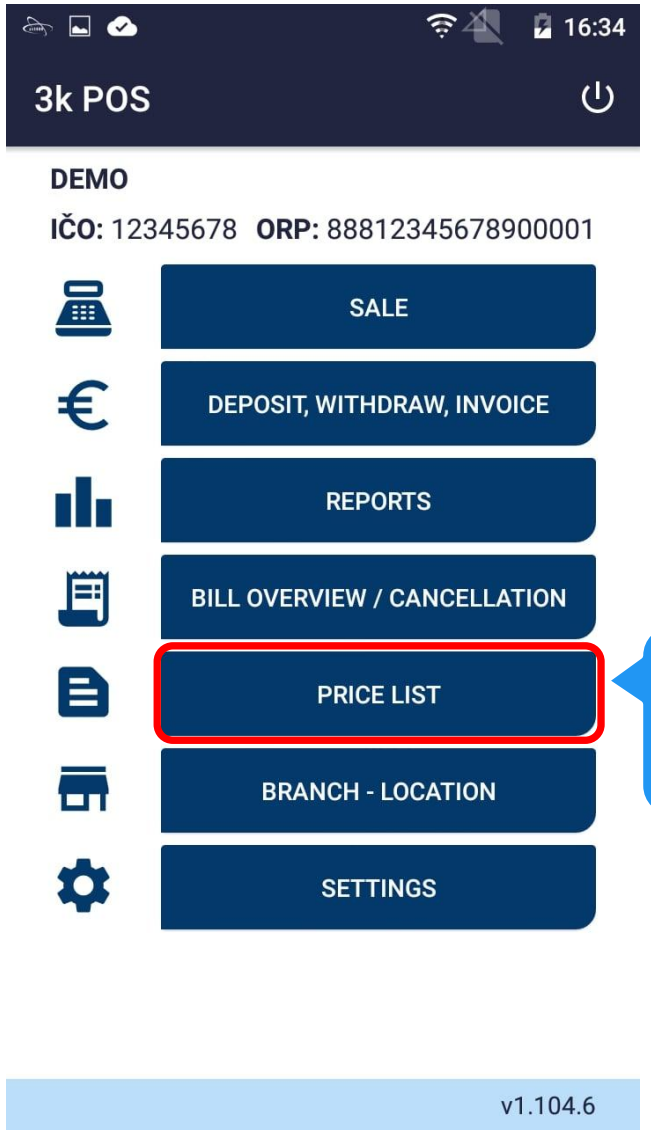

Click „Price list“

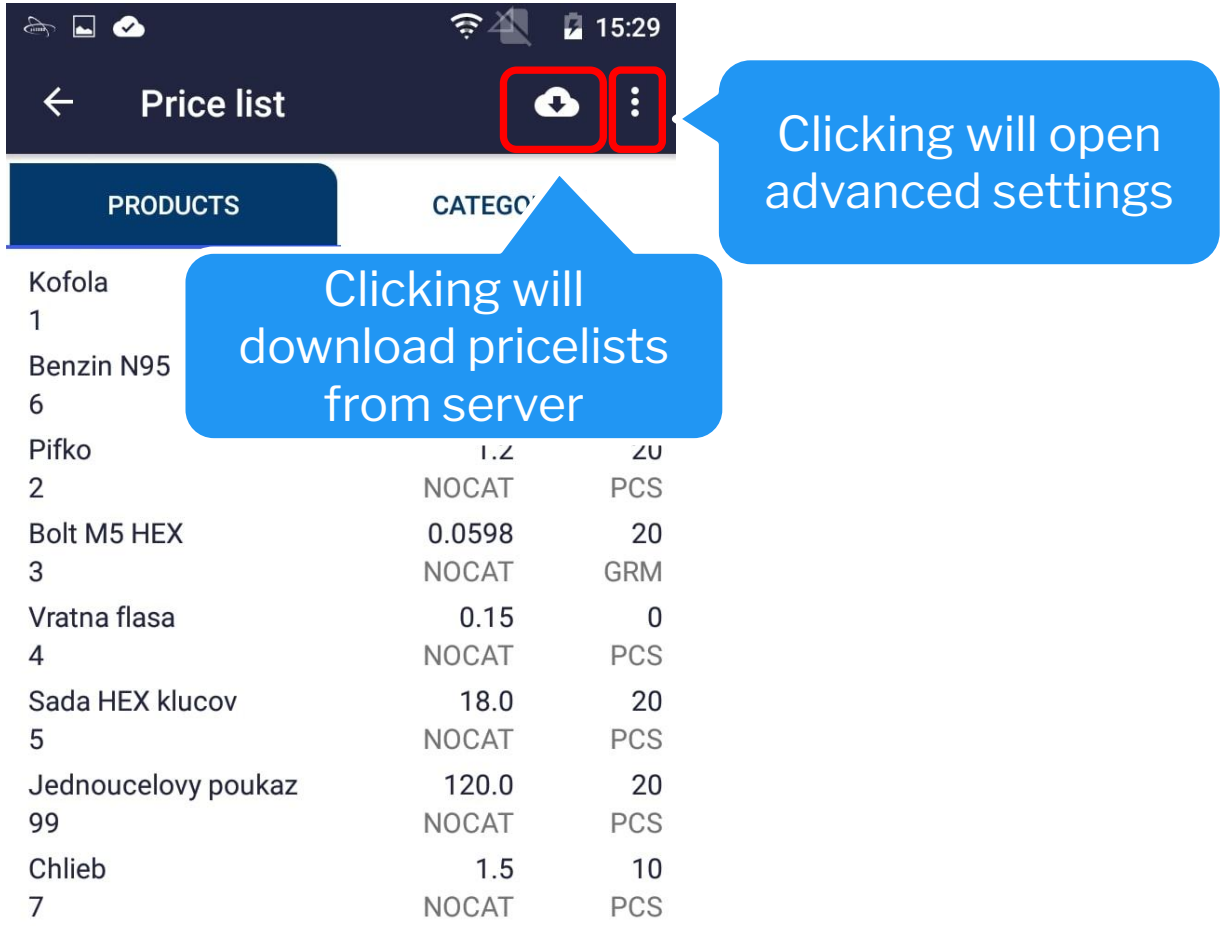
15:29
Price list
PRODUCTS
CATEGO
Clicking will open advanced settings
Clicking will download pricelists from server
Kofola
1
Benzin N95
6
Pifko
2 NOCAT PCS
Bolt M5 HEX 0.0598 20
3 NOCAT GRM
Vratna flasa 0.15 0
4 NOCAT PCS
Sada HEX klucov 18.0 20
5 NOCAT PCS
Jednoucelovy poukaz 120.0 20
99 NOCAT PCS
Chlieb 1.5 10
7 NOCAT PCS

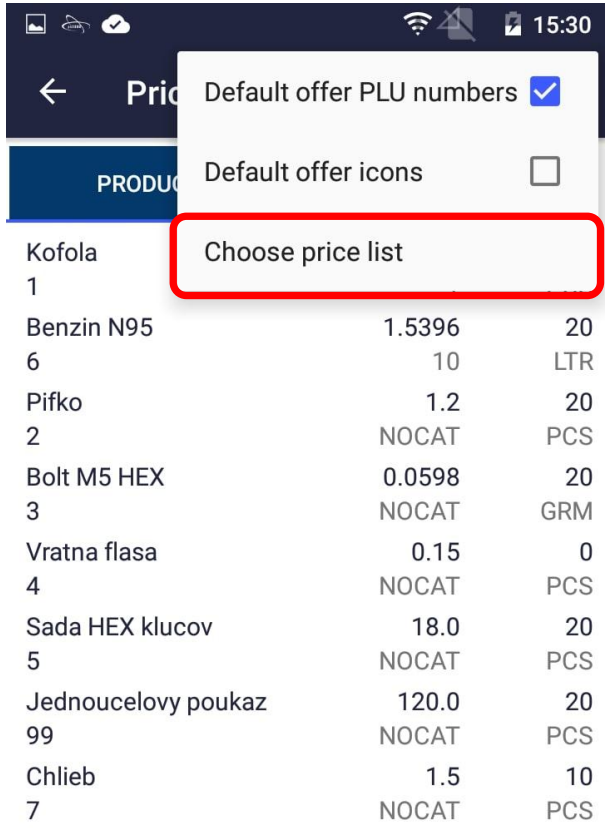

Clicking this will allow you to select a specific price list

SALE

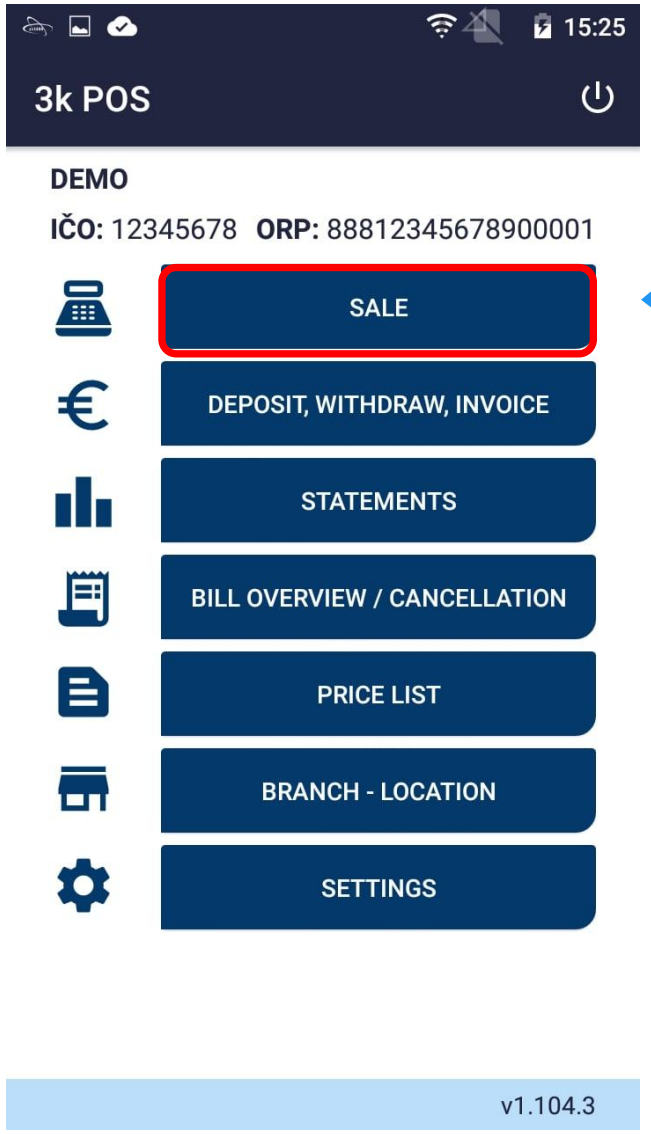
15:25
3k POS
DEMO
IČO: 12345678 ORP: 88812345678900001
SALE
DEPOSIT, WITHDRAW, INVOICE
STATEMENTS
BILL OVERVIEW / CANCELLATION
PRICE LIST
BRANCH - LOCATION
SETTINGS
v1.104.3

Click „Sale“

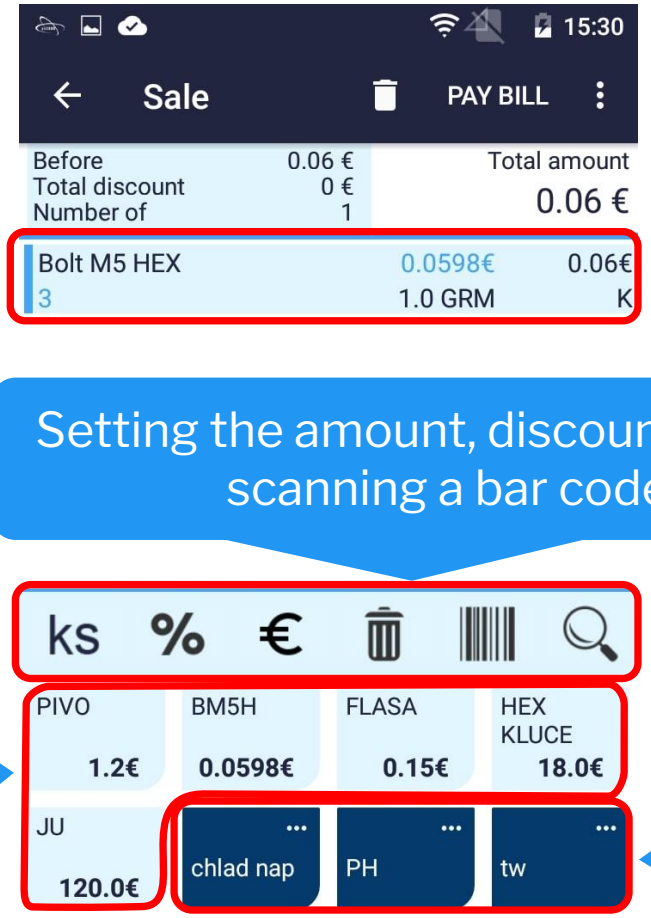

Clicking an item will allow you to change the price, apply a discount and etc.

Setting the amount, discount, price of item, deleting an item, scanning a bar code and searching for item

Pricelist items

Pricelist categories

Clicking will delete the whole document

Clicking will open advanced settings

Clicking will forward you to payment

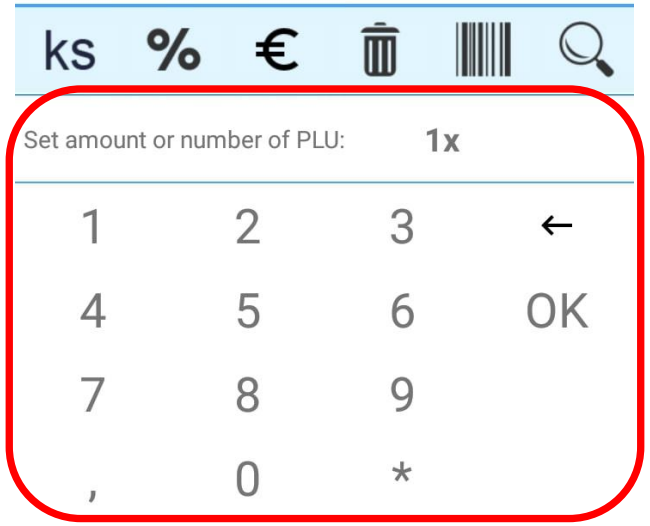

In case you have selected display PLU numbers, you will have to input amount * PLU

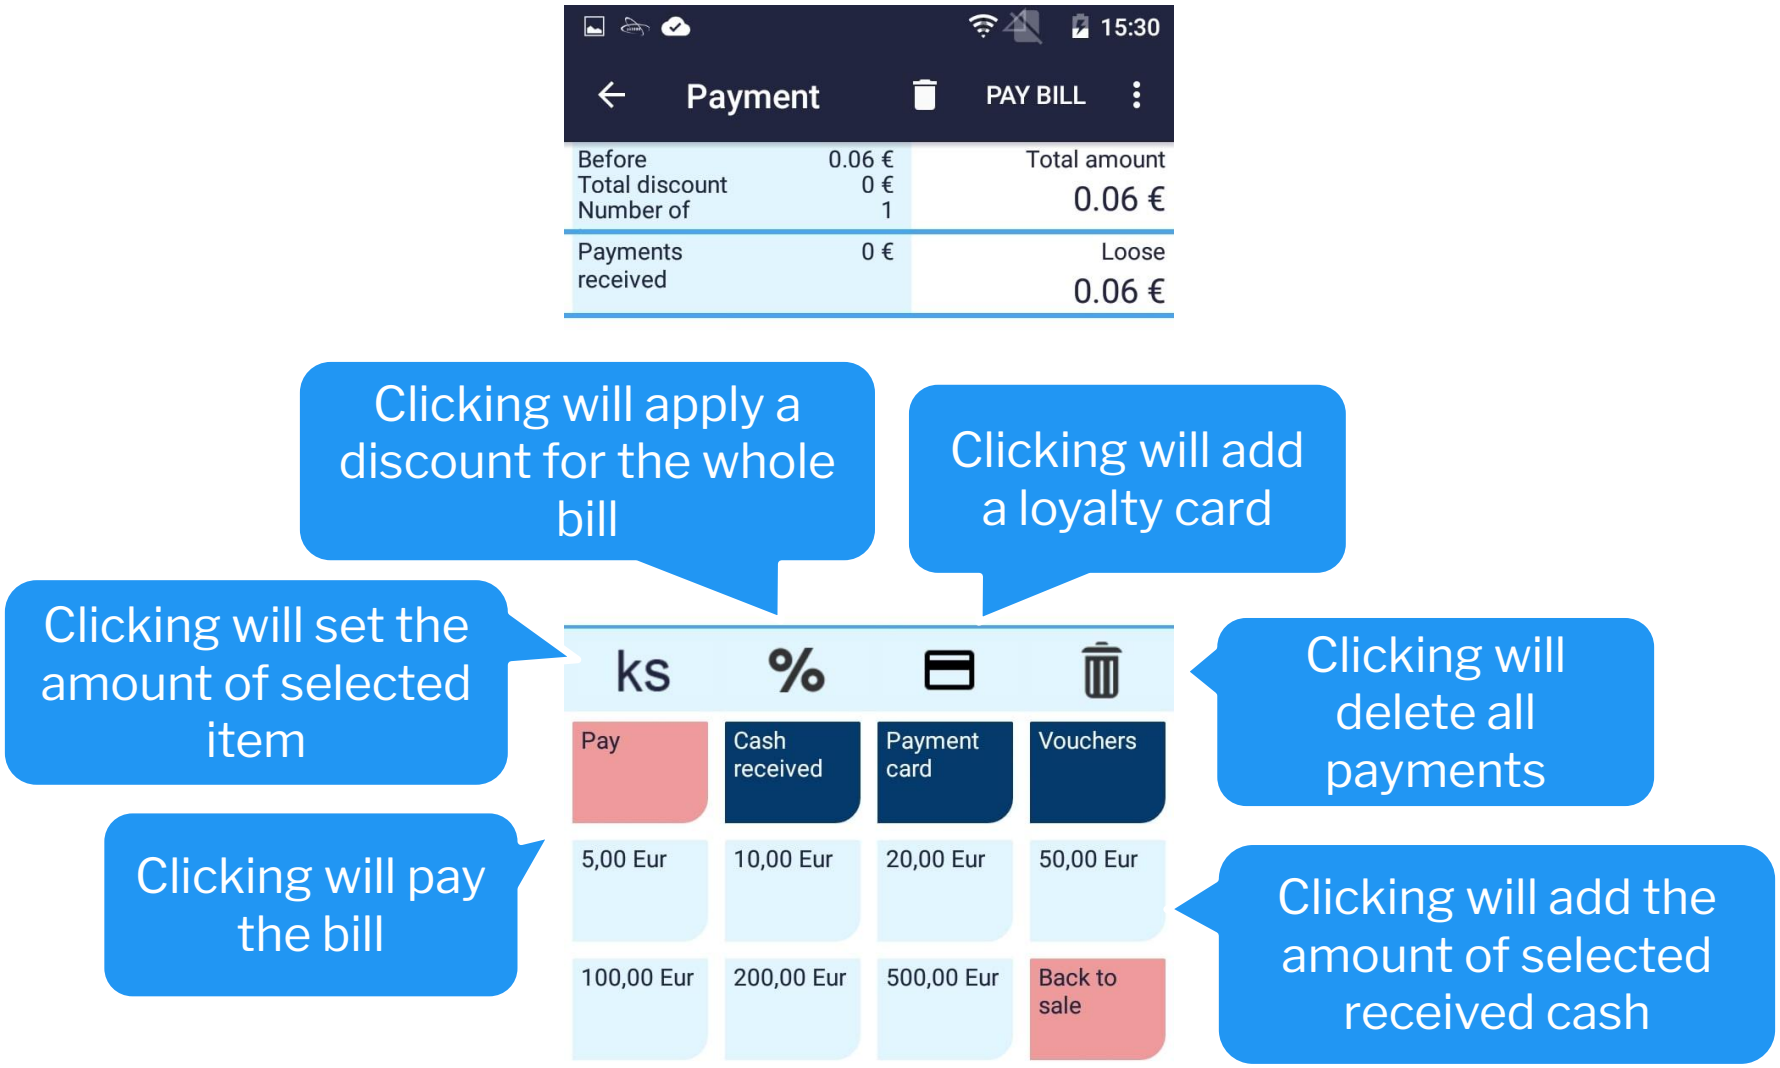
15:30
Payment
PAY BILL
Before 0.06 €
Total discount 0 €
Number of 1
Total amount
0.06 €
Payments received 0 €
Loose
0.06 €
Clicking will apply a discount for the whole bill
Clicking will add a loyalty card
Clicking will set the amount of selected item
ks
%
Clicking will delete all payments
Pay
Cash received
Payment card
Vouchers
Clicking will pay the bill
5,00 Eur
10,00 Eur
20,00 Eur
50,00 Eur
Clicking will add the amount of selected received cash
100,00 Eur
200,00 Eur
500,00 Eur
Back to sale

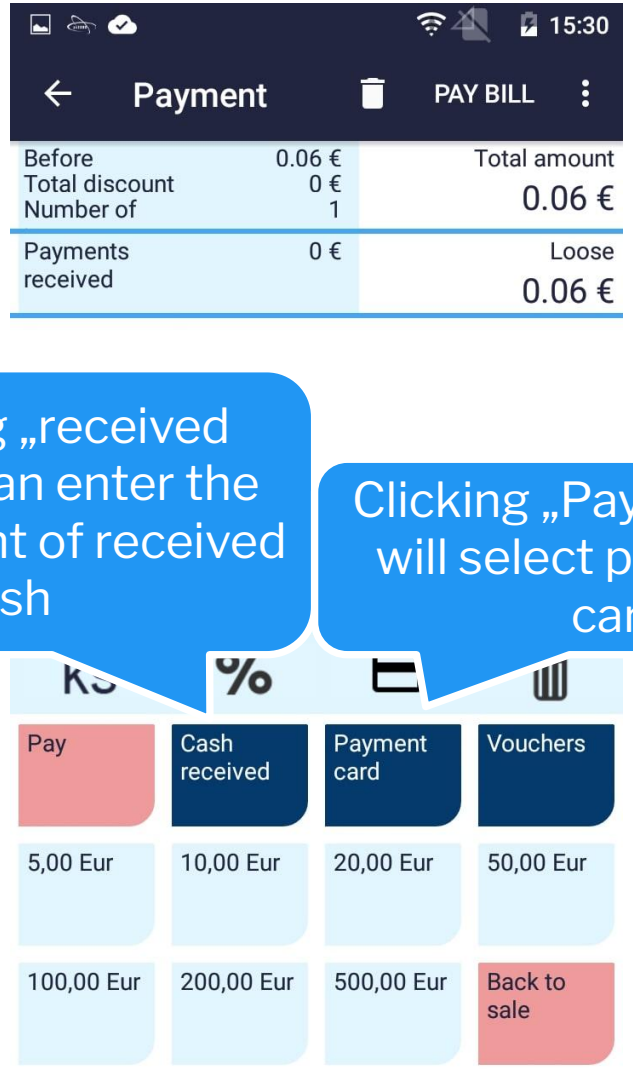

By clicking „received cash“ you can enter the exact amount of received cash

Clicking „Payment card“ will select payment by card

Clicking „Vouchers“ will select voucher payment

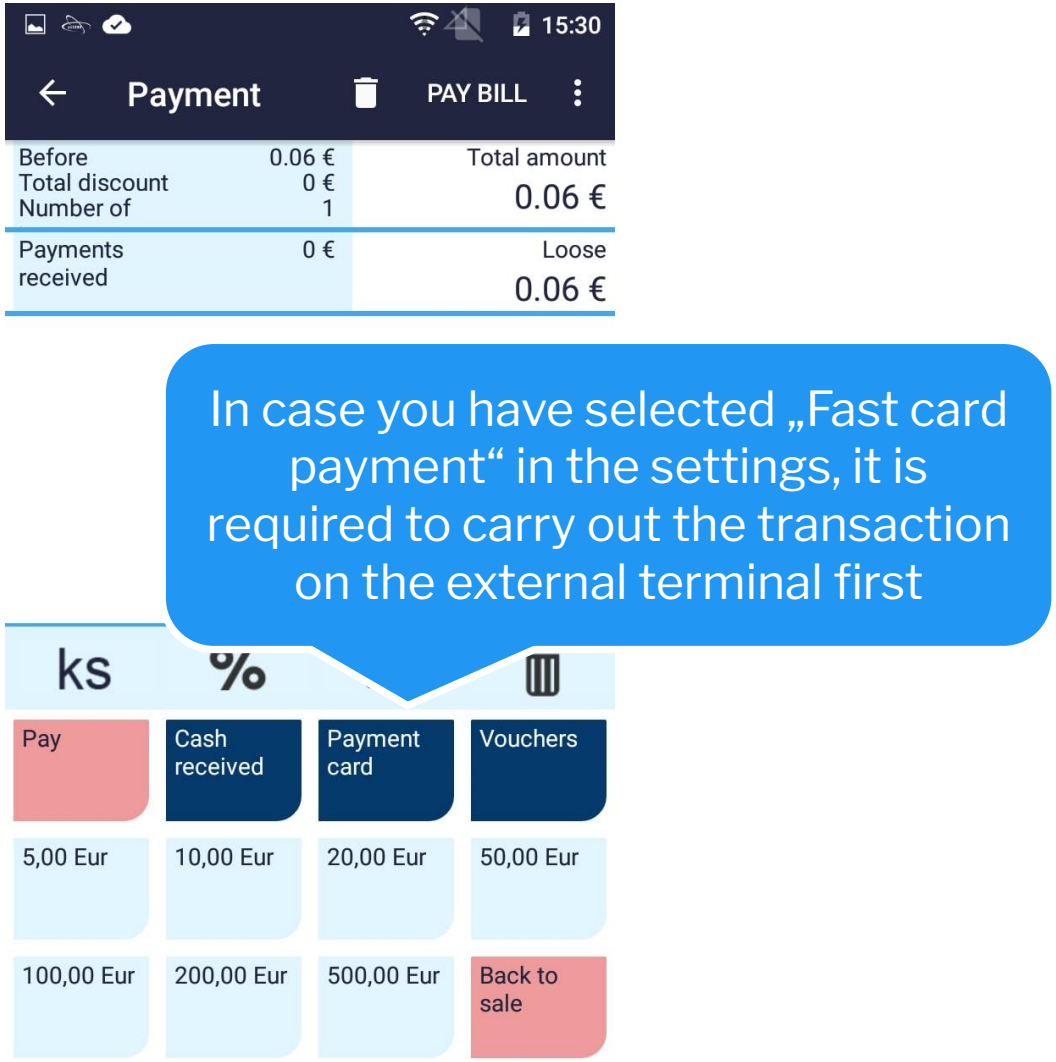
15:30
Payment
PAY BILL
Before
0.06 €
Total amount
Total discount
0 €
0.06 €
Number of
1
Payments received
0 €
Loose
0.06 €
In case you have selected „Fast card payment“ in the settings, it is required to carry out the transaction on the external terminal first
ks
%
Pay
Cash received
Payment card
Vouchers
5,00 Eur
10,00 Eur
20,00 Eur
50,00 Eur
100,00 Eur
200,00 Eur
500,00 Eur
Back to sale

17:03
Platba
ZAPLATIŤ
Pred zľavou 1.5 €
Zľava celkom 0 €
Počet položiek 1
Suma celkom
1.5 €
Prijaté platby 0 €
Doplatiť
1.5 €
After a successful transaction on the external device click „Pay by card“ and afterwards click „Pay bill“
ks
%
Zaplatiť
Prijatá hotovosť
Platobná karta
Poukážky
5,00 Eur
10,00 Eur
20,00 Eur
50,00 Eur
100,00 Eur
200,00 Eur
500,00 Eur
Späť do tovaru

BILL OVERVIEW / CANCELLATION

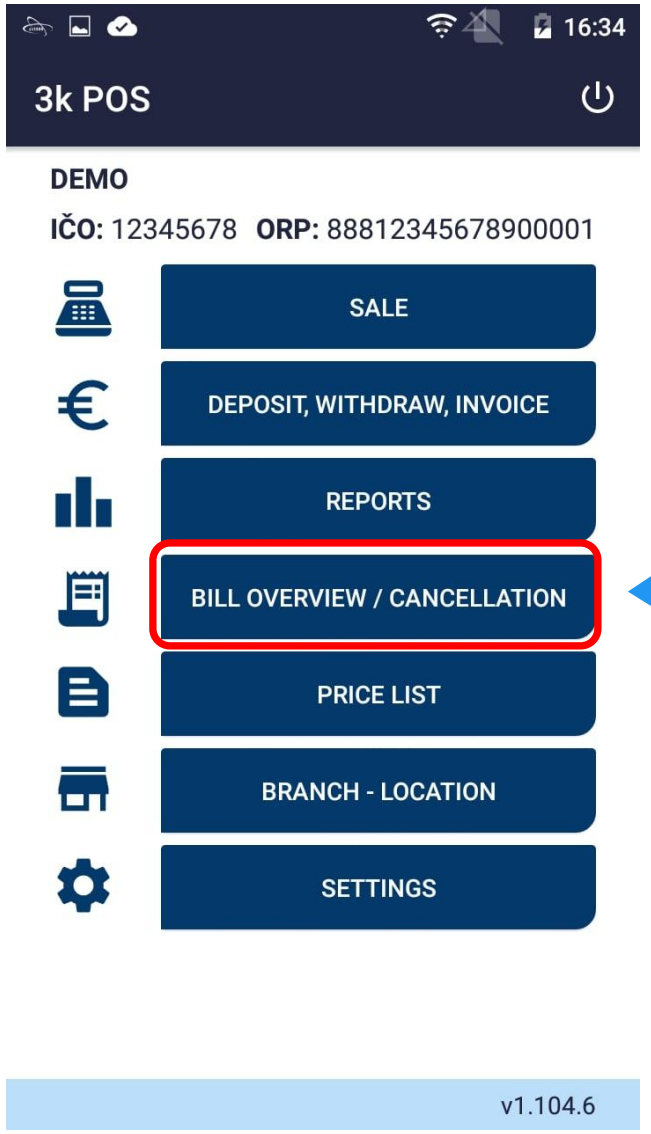

Click „Bill overview / cancellation“

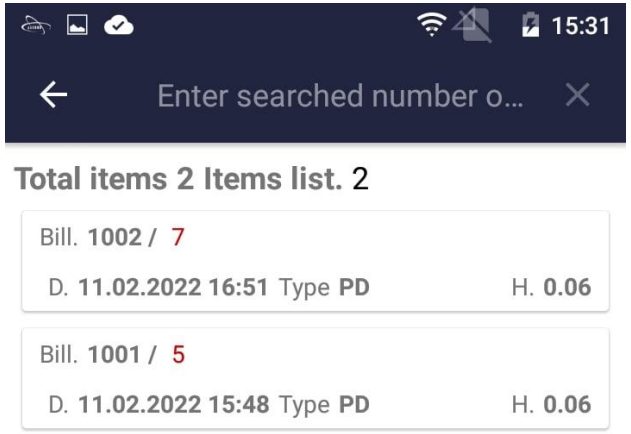

Cancel a bill by clicking on it

Clicking will enable you to scan a QR code and cancel the bill

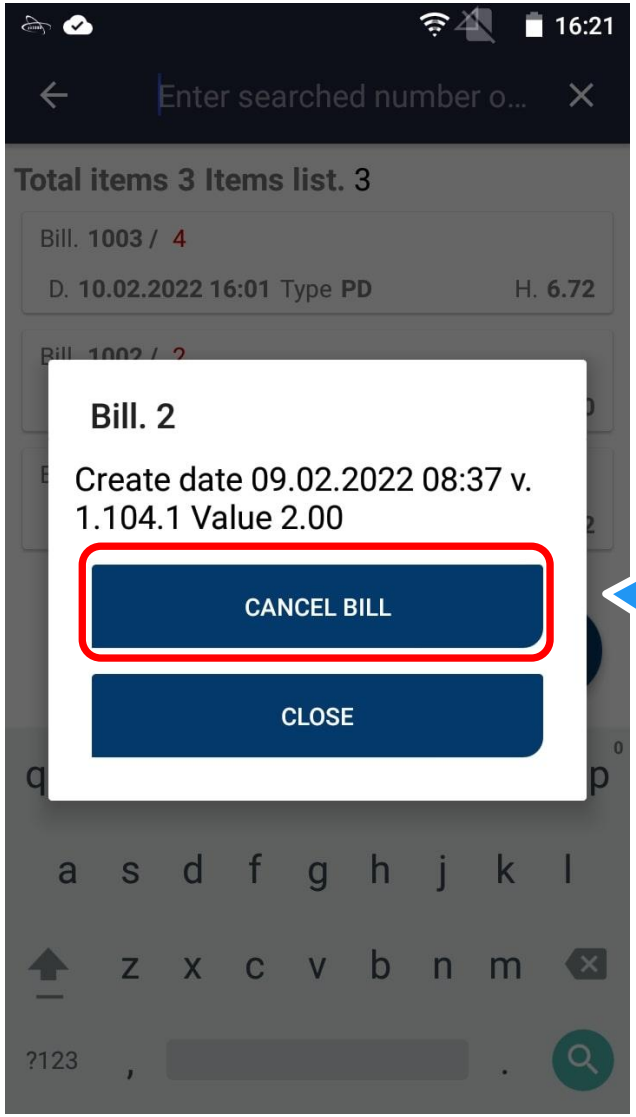

Clicking will cancel the bill

DEPOSIT, WITHDRAW, INVOICE

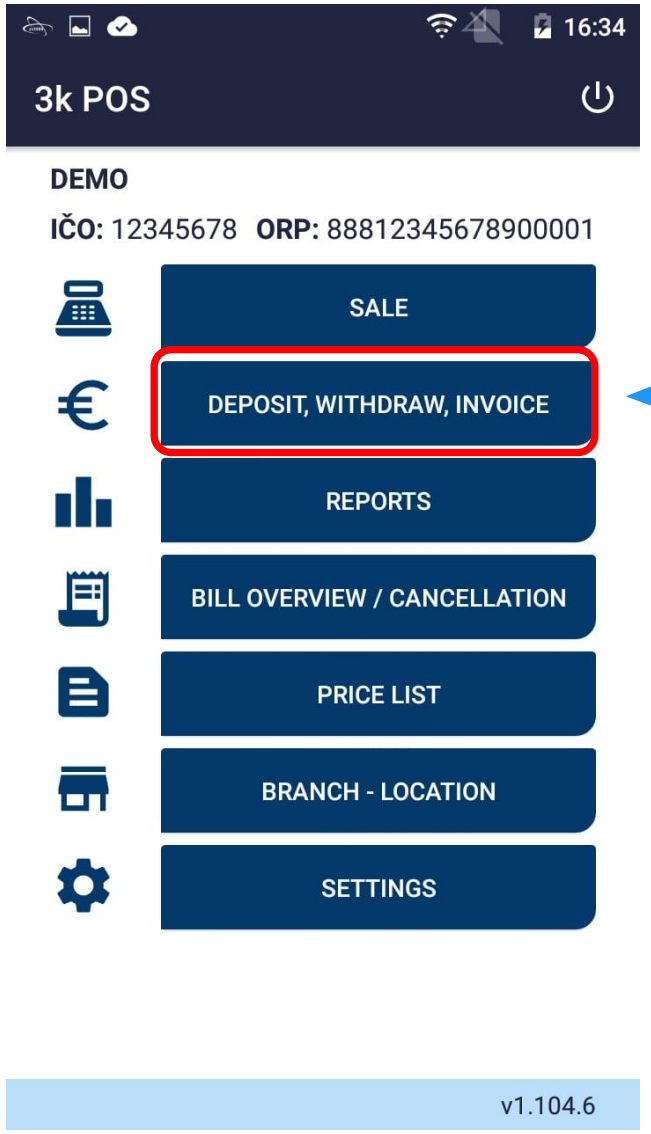

Click „Deposit, Withdraw, Invoice“

Click to deposit

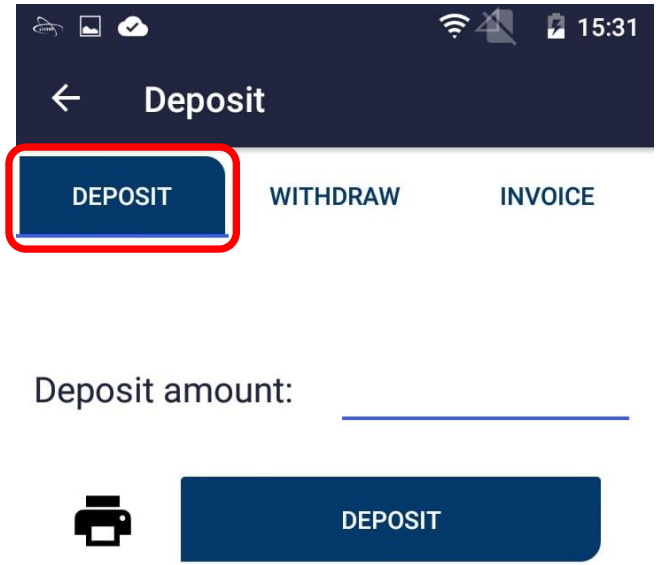

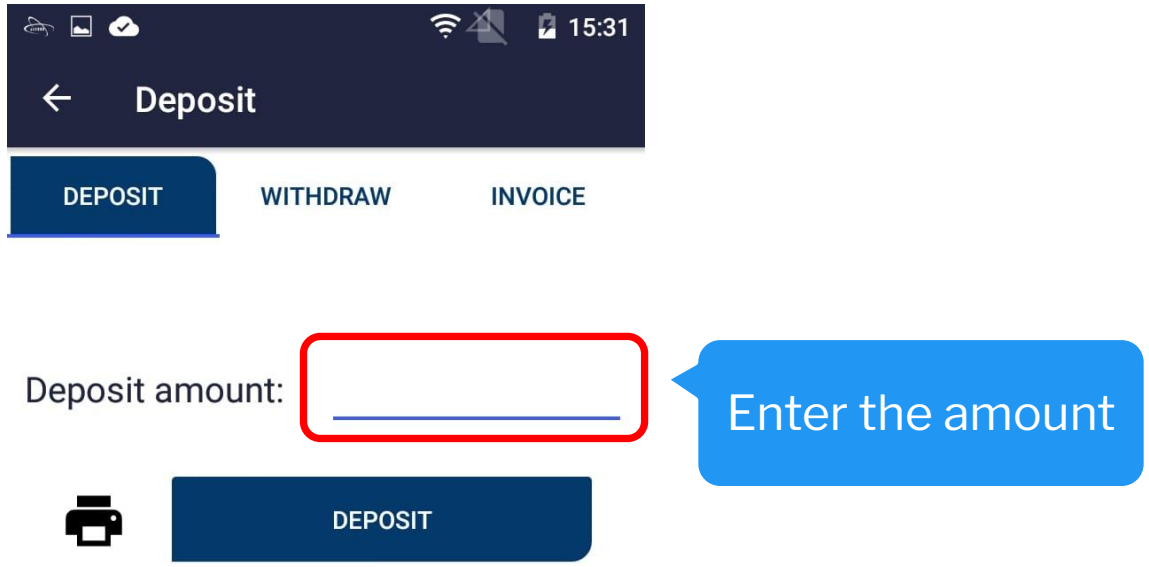
15:31
Deposit
DEPOSIT
WITHDRAW
INVOICE
Deposit amount:
DEPOSIT
Enter the amount

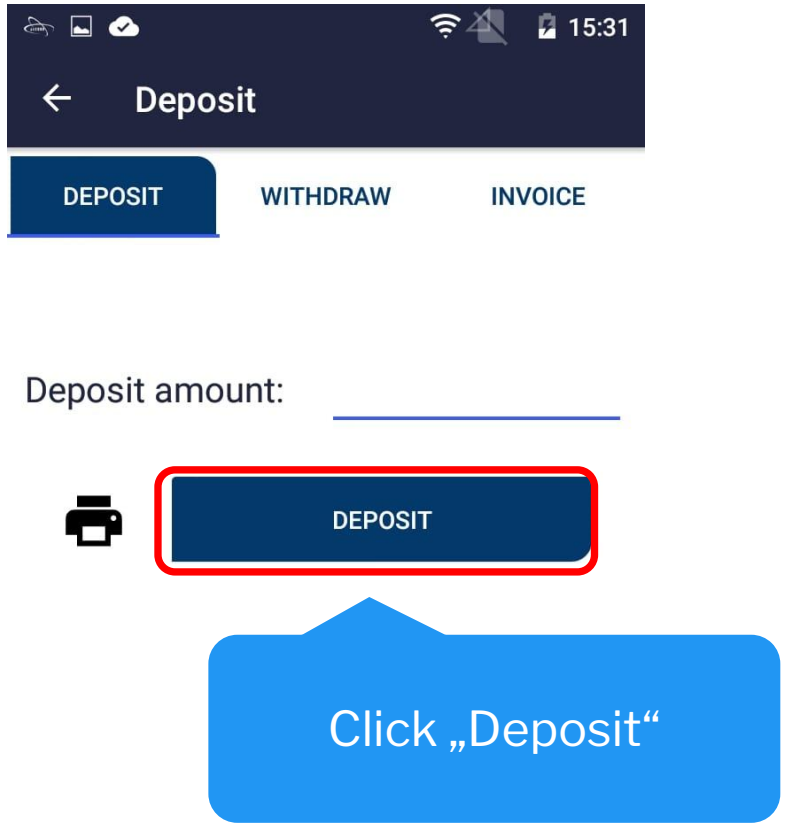
15:31
Deposit
DEPOSIT
WITHDRAW
INVOICE
Deposit amount:
DEPOSIT
Click „Deposit“

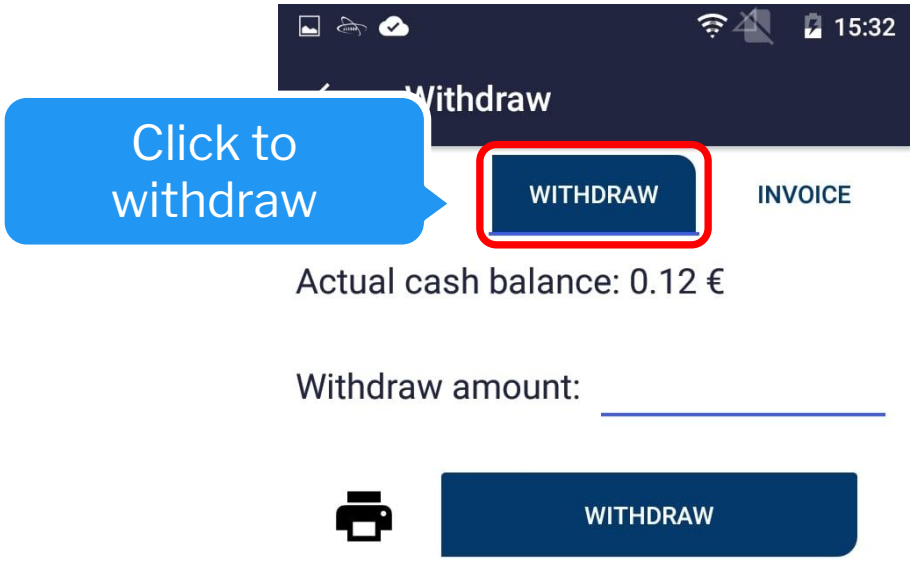
15:32
Withdraw
Click to withdraw
WITHDRAW
INVOICE
Actual cash balance: 0.12 €
Withdraw amount:
WITHDRAW

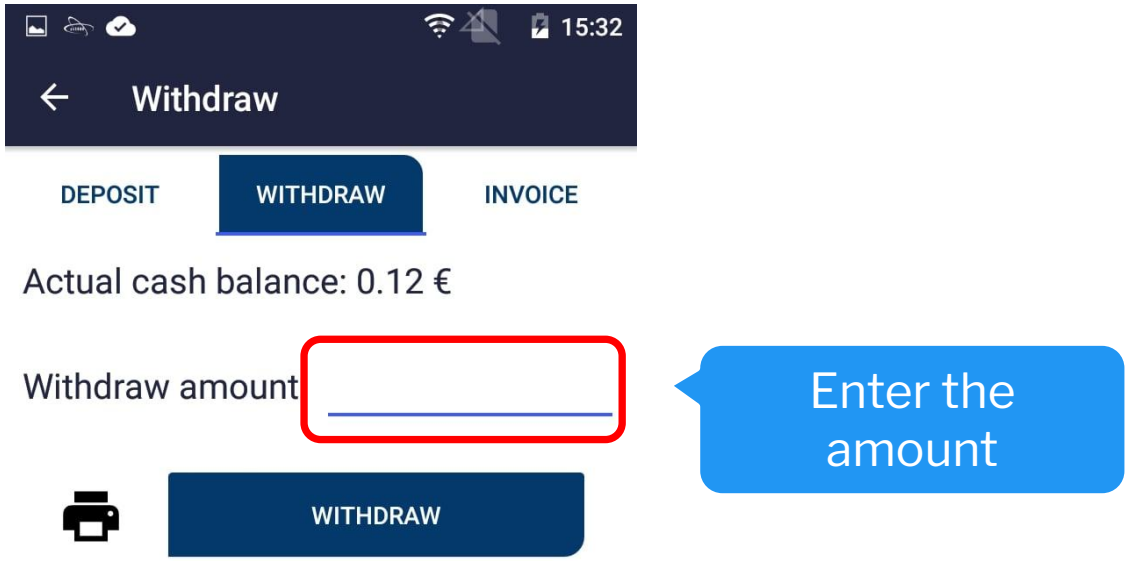
15:32
Withdraw
DEPOSIT
WITHDRAW
INVOICE
Actual cash balance: 0.12 €
Withdraw amount
WITHDRAW
Enter the amount

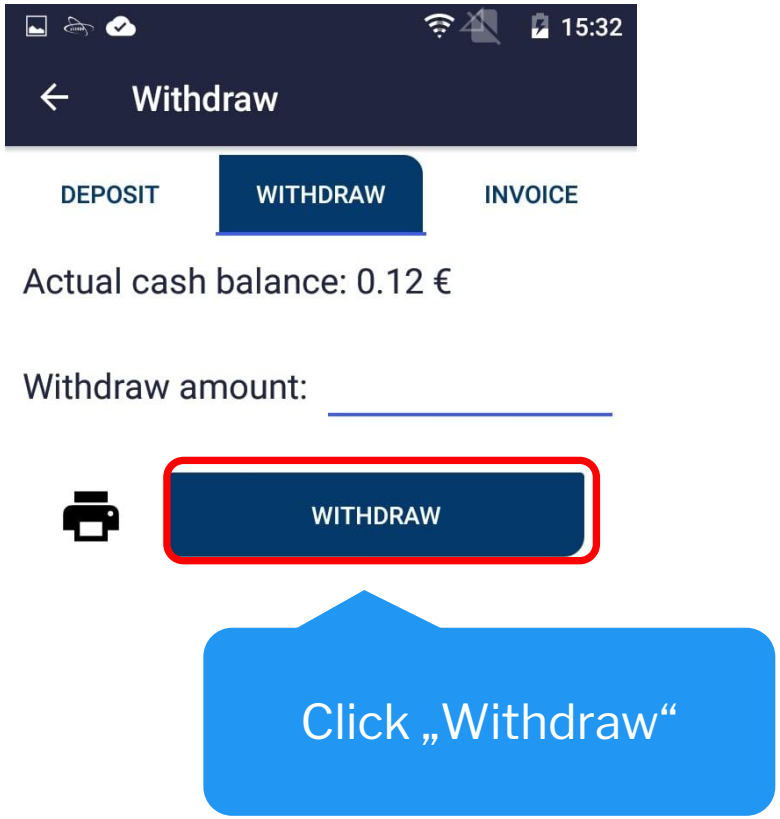
15:32
Withdraw
DEPOSIT
WITHDRAW
INVOICE
Actual cash balance: 0.12 €
Withdraw amount:
WITHDRAW
Click „Withdraw“

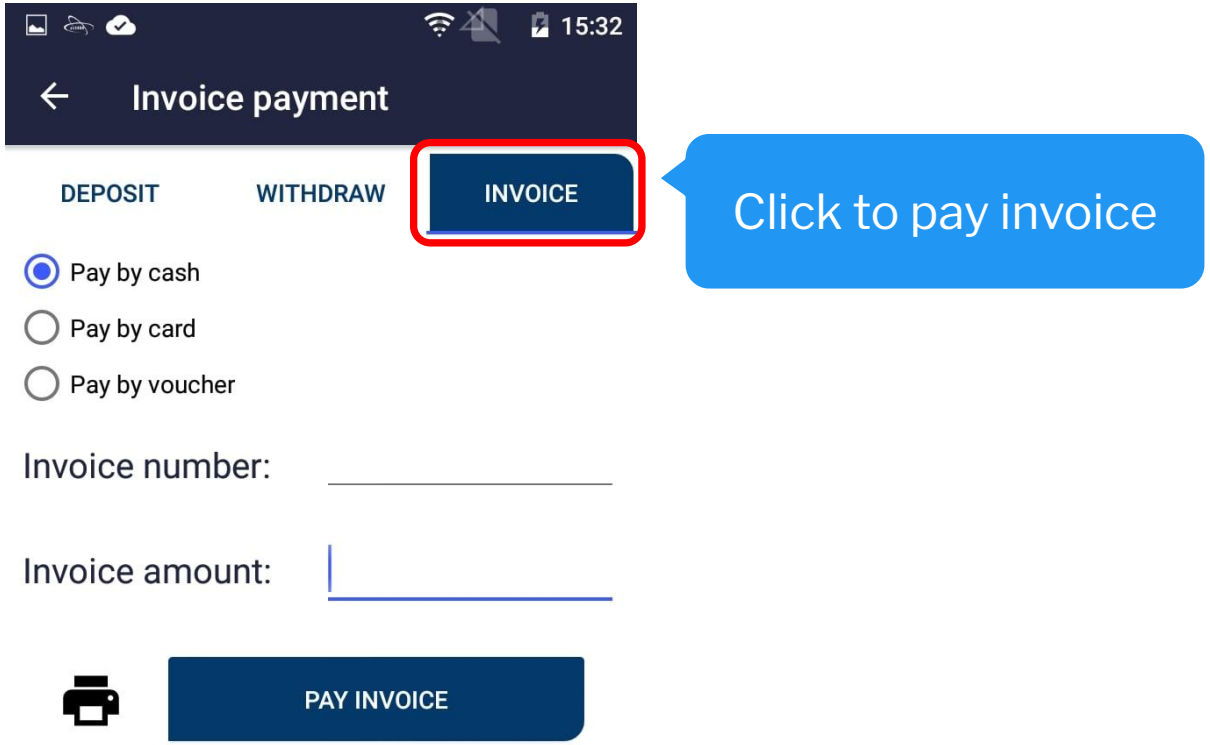
15:32
Invoice payment
DEPOSIT
WITHDRAW
INVOICE
Click to pay invoice
Pay by cash
Pay by card
Pay by voucher
Invoice number:
Invoice amount:
PAY INVOICE

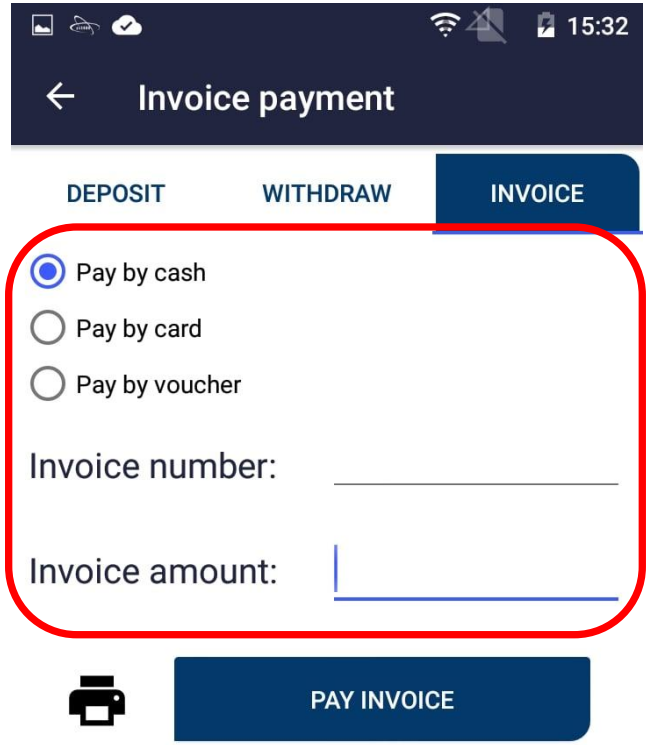

Fill out the invoice details

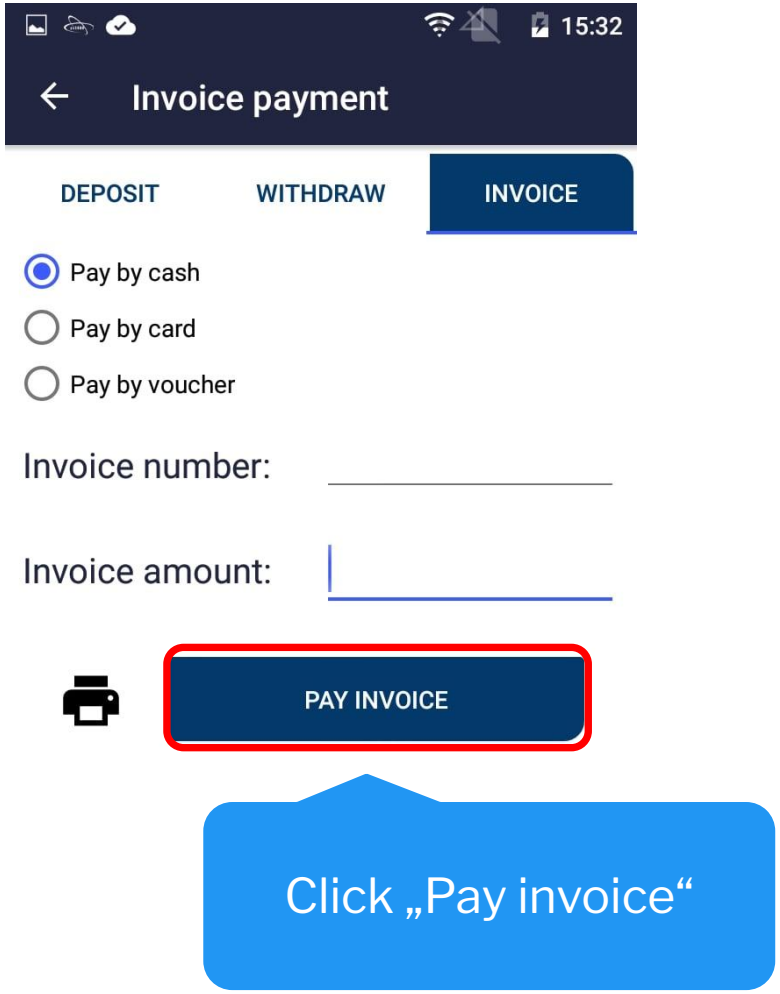
15:32
Invoice payment
DEPOSIT
WITHDRAW
INVOICE
Pay by cash
Pay by card
Pay by voucher
Invoice number:
Invoice amount:
PAY INVOICE
Click „Pay invoice“

REPORTS

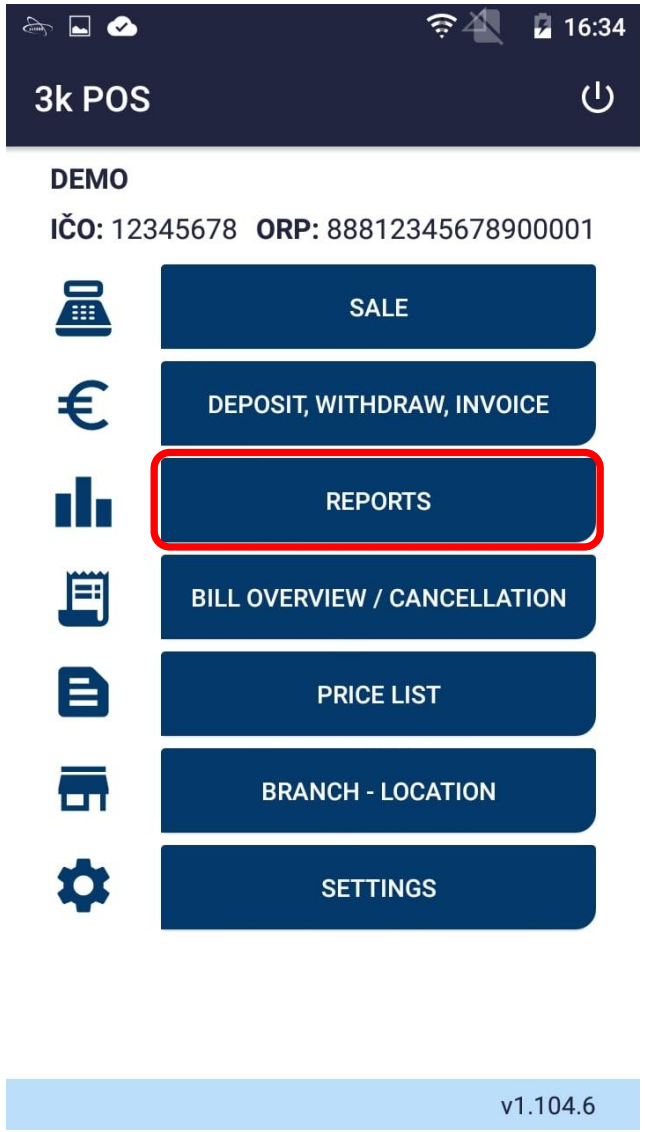

Click „Reports“

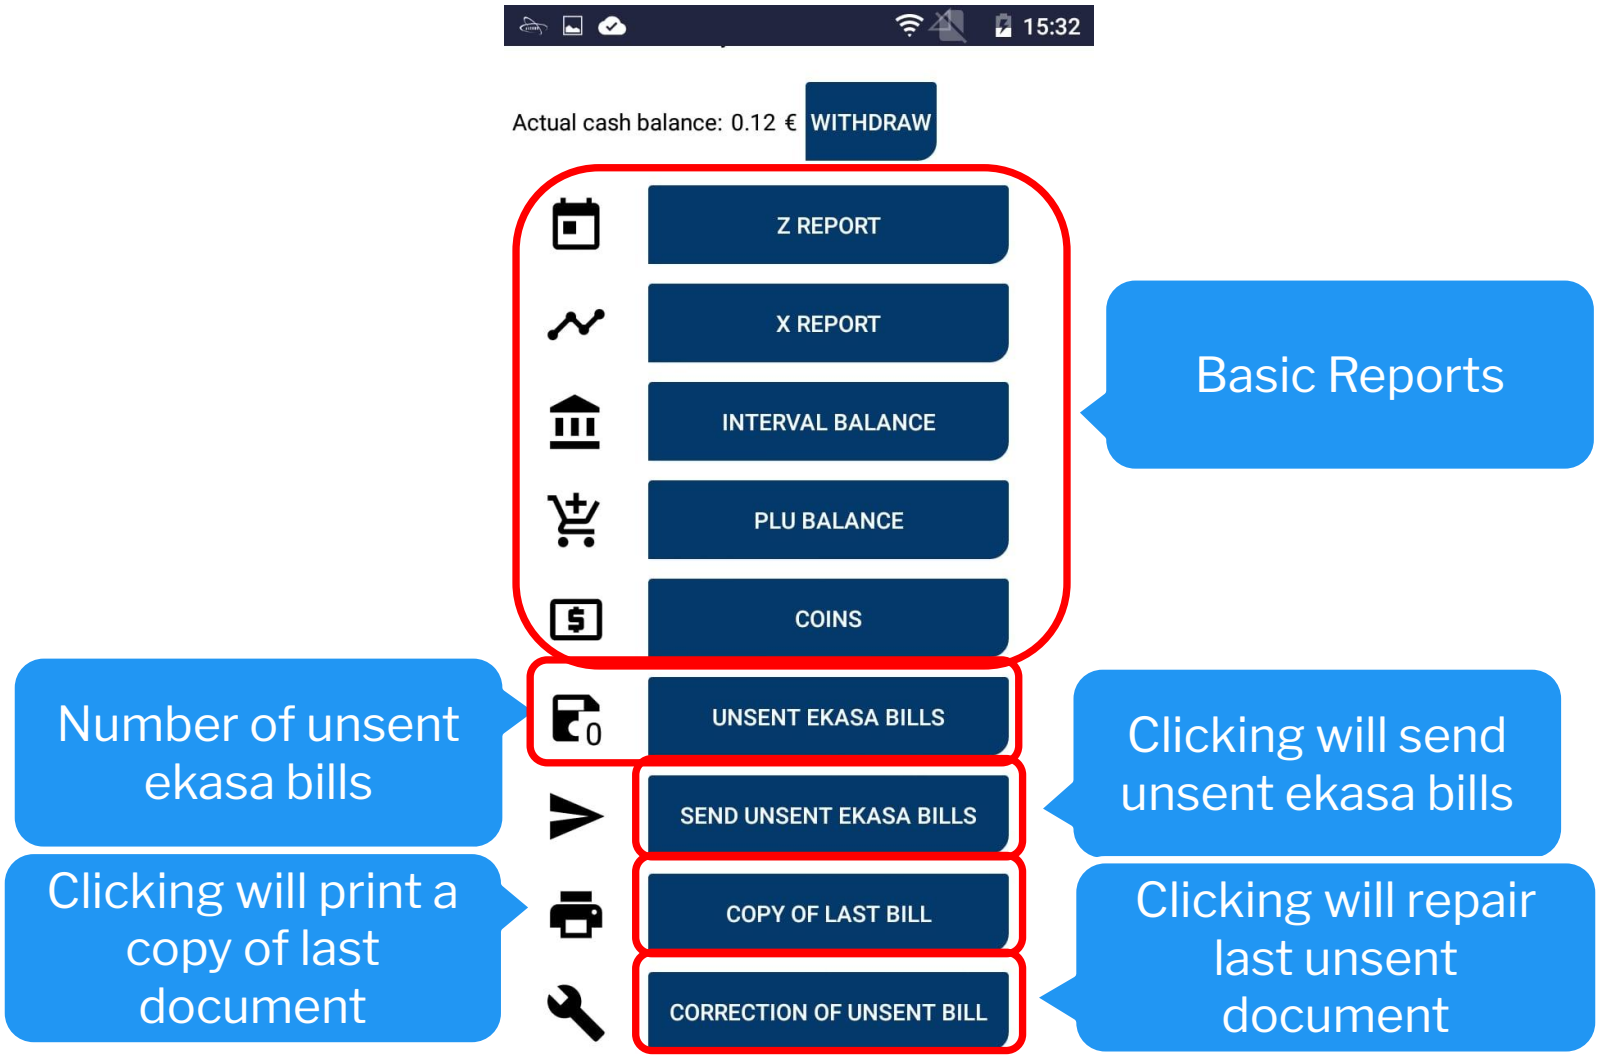
15:32
Actual cash balance: 0.12 €
WITHDRAW
Z REPORT
X REPORT
INTERVAL BALANCE
PLU BALANCE
COINS
Basic Reports
UNSENT EKASA BILLS
Number of unsent ekasa bills
SEND UNSENT EKASA BILLS
Clicking will send unsent ekasa bills
COPY OF LAST BILL
Clicking will print a copy of last document
CORRECTION OF UNSENT BILL
Clicking will repair last unsent document